

STEP 21



Body Post #1278



4-40 x 3/8" Button Head #2032



4-40x1/2" Pan Head #2014


1

-Run the two button head screws up through the designated holes in the tweak board and tighten down the body posts.

2


-Run the two pan head screws up through the designated holes in the chassis and tighten down the body posts.

1

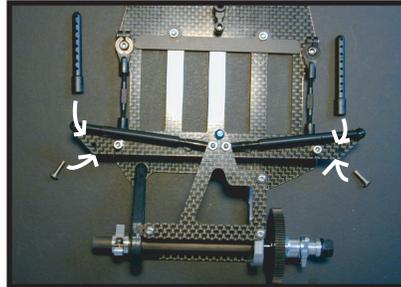


BEFORE

1

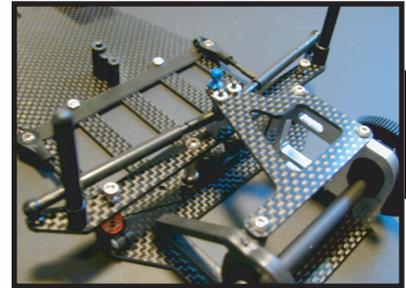


AFTER

2

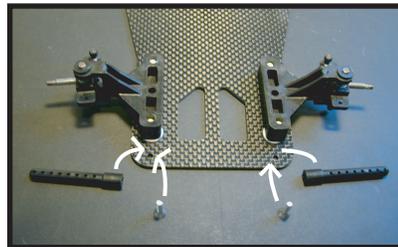

BEFORE

2

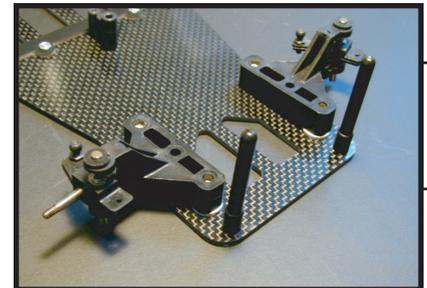

AFTER

STEP 22




Body Clip #2093

1


-Snap the body clip into the body post at the position that best suits the body that you are running, a good starting point is generally 3rd hole from the bottom.

1

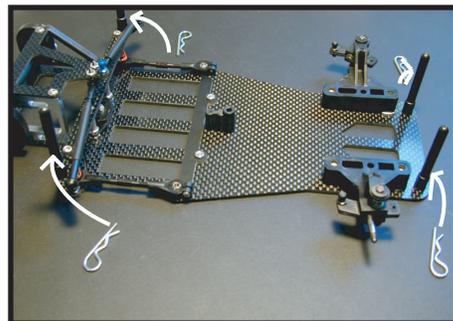

BEFORE

1

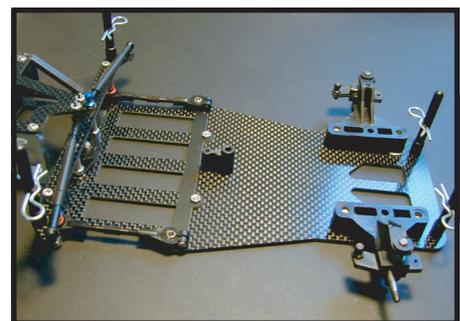

AFTER