


STEP 5

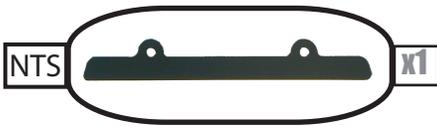

Rev. 4 Battery Brace



4-40x1/4 Pan Head Steel #2010





4-40 Mini Nuts #2076

1

-Run the two screws under the chassis

2

-Above the chassis have the brace go through the screws first, then have the nuts go over the battery brace to hold it down.

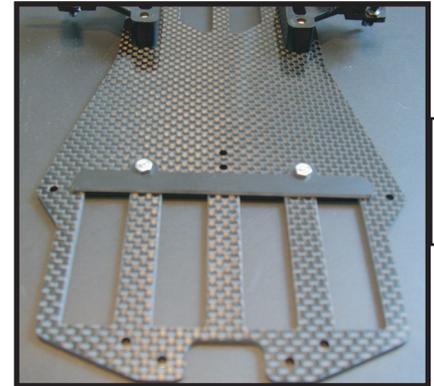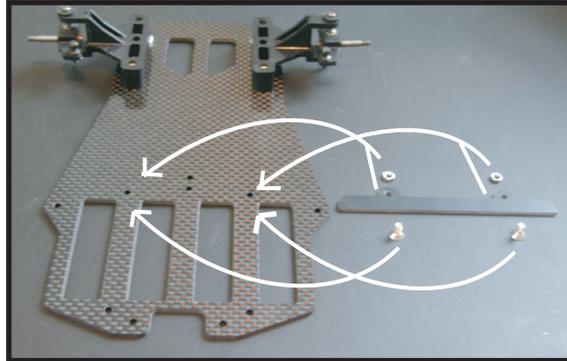

STEP 6



4-40x3/8 Pan Head Steel #2012



Antenna Mount # 1432

1

-Run the two screws under the chassis

2

-Have the antenna positioned so that the large hole is forward and secure it to the chassis.

