


STEP 9

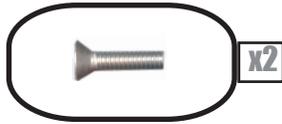

x2

4-40 x 1/2" Pan Head # 2014



x4

4-40 Flat Nut #2078


1

- Run the two screws under the designated holes in the chassis, then tighten a nut over each one.

2


- Slide the pivot assembly over the two screws and nuts, then lock two nuts over the pivot assembly (The pivot assembly should be sandwiched between two nuts)

1

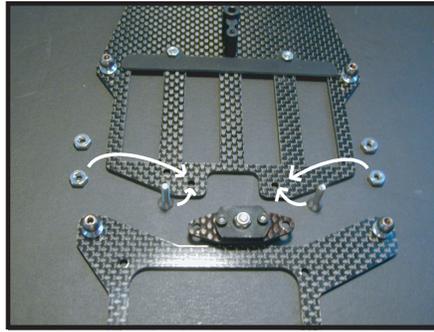

BEFORE

2

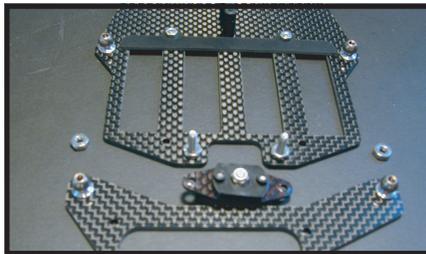

BEFORE

1




AFTER

2



AFTER

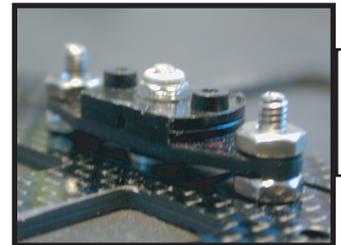


AFTER

STEP 10



x2

Turnbuckle

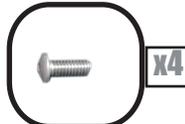

x4

2-56 x 1/4" Button Head #2060



x4

EZ Adjust Rod End #1265-s

1

- Run the screw through the designated hole in each end piece (making sure to have it first enter the side with the large hole) Repeat for each piece

2

- Twist on an end piece on each side of the turnbuckle. The length of the exposed turnbuckle should be around .990". Repeat for second turnbuckle.

1



BEFORE

2



BEFORE

1



AFTER

2



AFTER