


STEP 13





2/56 BallStud #2068

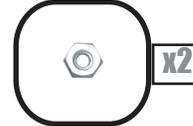


2/56 Mini-Nut #2072

① -Run the two 2-56 ballstuds through the outmost holes on the tweak brace, and then secure it by tightening the nut under the tweakbrace

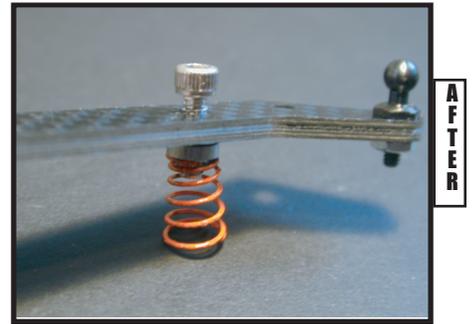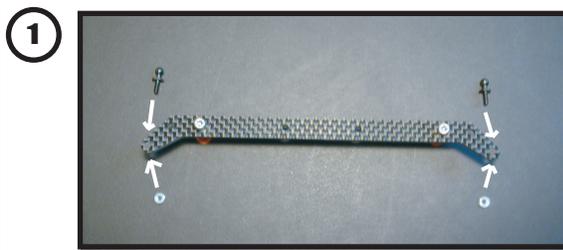

STEP 14

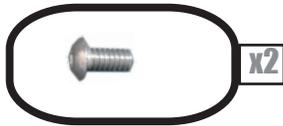

4-40 x 1/2" Button Head # 2030



Stand-Off #1272

① -Twist on the two stand-offs to the designated screws. Make sure they are tightly secured.

② -Place the tweak brace on top of the stand-offs, lining up the holes (and making sure that the 2-56 ballstuds are offset to the front of the car) and secure it to the chassis by tightening the two screws. Then adjust the tweak springs so that each one is just touching the side link.

