



STEP 15

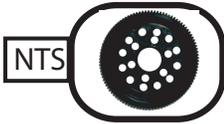

100t Spur Gear #1439

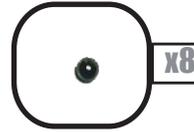


1/8" Hardened Differential Balls #1438

1

-Place one differential ball in each of the 12 outside holes on the spur gear, applying Diff Lube (not supplied in kit) to each ball.

1

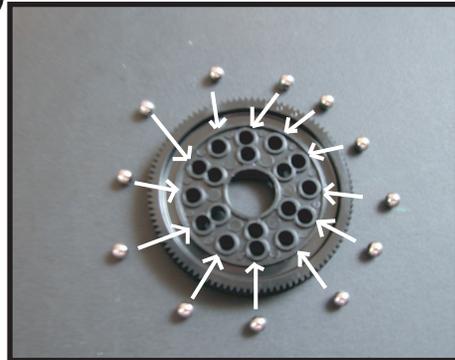

1

APPLY DIFF LUBE TO EACH DIFF BALL (BOTH SIDES)



STEP 16



Right Side Hub



Flanged Bearing #5001




Un-Flanged Bearing

1

-Slide the un-flanged bearing into the spur gear

-Slide the flanged bearings into the top and bottom of the right side hub, with the flanges facing out on both ends

1

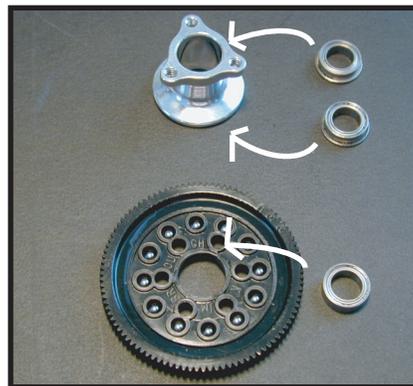

1

