

STEP 19



1/4" Shims #2090




Left Side Clamping Hub

1


-First slide two shims onto the rear axle so that they are as close to the spur gear as possible. Then slid the axle through the two ride height adjusters and then slide two additional shims onto the axle. Then with the fat side first, slide the left side clamping hub onto the axle and tighten the screw.

1

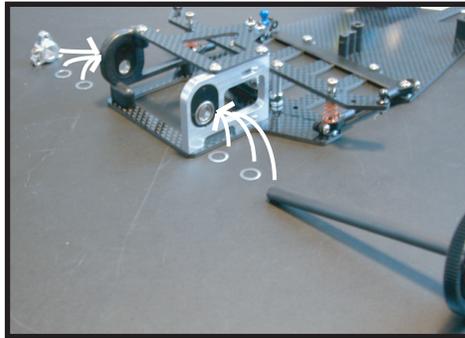

B
E
F
O
R
E

1

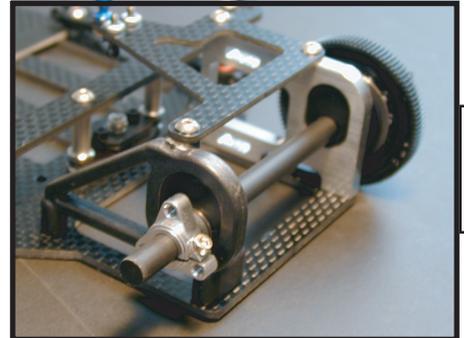

A
F
T
E
R

STEP 20



Damper Tube #1422

x2


1

-Apply damper tube lube to the damper tube plunger so that is thoroughly coated, then slide the plunger into the tube. Repeat for other side.

2


-Snap damper tubes in place.

2

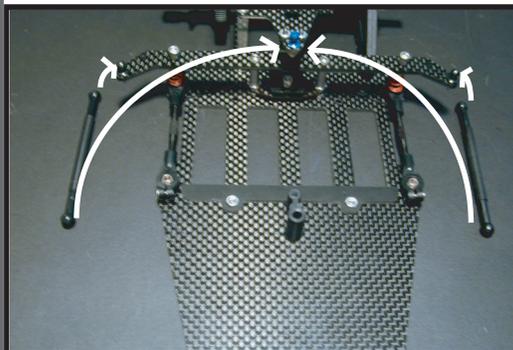

B
E
F
O
R
E

2

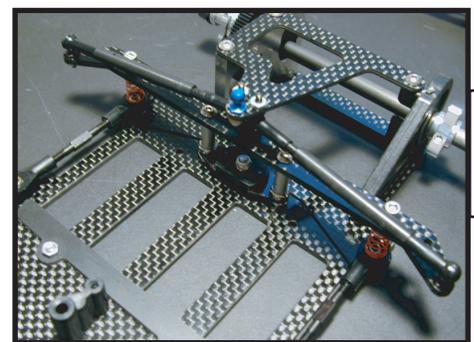

A
F
T
E
R