

STEP 1



Steering Hub #1281



Axle #1289



E-Clip #2092





Ballstud #2069

- 1
-Clip E-Clip onto Axle
-Slide Axle through hub

- 2
-Screw ballstud into hub

- 3
-Repeat for other side

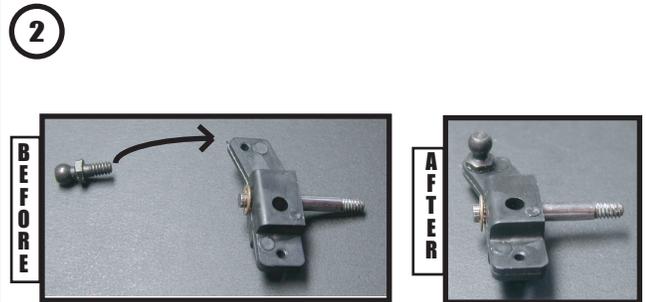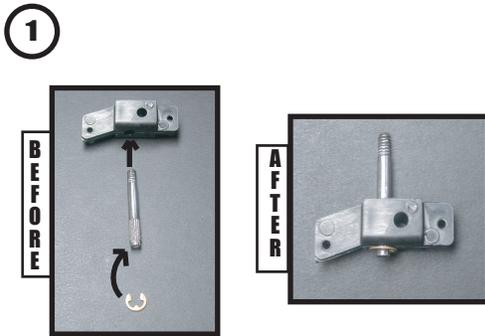


STEP 2



KingPin #1282



E-Clip #2092

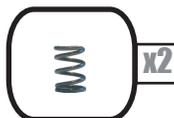

.020" Spring #1285



Right and Left Arm #1289

- 1
-Place the spring and hub in between the two holes on the arm

- 2
-Slide the hinge pin through the top of the arm, then the spring, then the hub, then the bottom of the arm

- 3
-Snap E-Clips into grooves in kingpin, (which captures hub between the two E-Clips)

- 4
-Repeat for the other side
-Make sure to have the bump on the arm face forward

